




Cabin Altitude

Displays the cabin altitude



Cabin Climb Rate

Displays the rate at which the airplane climbs based on cabin

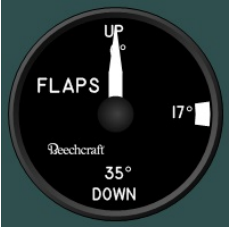

Flaps Status

Shows how far the flaps are extended



Fuel Flow for Engine

Fuel flow in pounds/hour for engine



Fill level for tank (X-Plane Version)

Displays current tank level in pounds for tank



Fill level for tank (FSX/P3D Version)

Displays current tank level in pounds for tank



Inter Turbine Temperature

Displays the combustion gas temperature between the first and second stages of the turbine section



N1 Percent RPM

Displays the speed of the innermost rotating shaft in a turbine engine



Oil Pressure and Temperature

Displays the oil pressure in psi and oil temperature in Deg C



Propeller Synchronization (X-Plane Version)

Displays if the propellers are in sync



Propeller Synchronization (FSX/P3D Version)

Displays if the propellers are in sync



RPM of Propeller

Displays the RPM of the propeller attached to an Engine



Torque of Engine

Displays the torque of Engine in ft/lbs

Distance Measuring Equipment



Shows distance, groundspeed and time to navaid selected



Horizontal Situation Indicator

Combines a NAV1/2 & ADF Display and a Heading Indicator into one Instrument



Horizontal Situation Indicator

Combines a NAV1 Display and a Heading Indicator into one Instrument



Radio Magnetic Indicator

Displays the direction to a NDB and VOR and magnetic heading (slaved to Gyro)



Airspeed Indicator

Displays airspeed in knots



Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Artificial Horizon Analog

Displays attitude of aircraft



Artificial Horizon EFIS

Displays attitude of aircraft

Radio Altimeter with Decision Height Bug



Displays altitude in feet above ground level. Ability to set decision height with lit LED when decision height is reached.

Slip Indicator



Displays if the aircraft slips (is uncoordinated).

Turn Rate and Slip Indicator (Copilot)



Displays the turn rate in deg/min and if the aircraft slips (is uncoordinated).

Turn Rate and Slip Indicator (Pilot)



Displays the turn rate in deg/min and if the aircraft slips (is uncoordinated).

Vertical Speed Indicator



Displays the rate at which the airplane climbs or descends in feet/minute