



Torque of Helicopter Engines

Displays the torque of the helicopter engine in percent



Horizontal Situation Indicator

Displays the current heading with bug for autopilot and the direction to/from the VOR



Airspeed Indicator

Displays airspeed in knots



Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Artificial Horizon

Displays attitude of helicopter (configurable to show Flight Director)



Radar Altimeter

Displays altitude in feet above ground level.



Vertical Speed Indicator

Displays the rate at which the helicopter climbs or descends in feet/minute