



Cabin Altitude

Displays the cabin altitude



Cabin Climb Rate

Displays the rate at which the airplane climbs based on cabin

Date Display - Local



Displays local date



Displays Flaps Status

 
Shows how far the flaps are extended

Outside Air Temperature



Displays the outside air temperature in Deg C

Time Display - Local




Displays local time

Endurance Display (FSX/P3D Version)



Displays flight endurance calculated from fuel and fuel flow

 Endurance Display (X-Plane Version)



Displays flight endurance calculated from fuel and fuel flow

Displays Fuel Flow for Engine



Fuel flow in lbs/hour

Display total fuel in LBS (FSX/P3D Version)



 
Displays current available fuel in LBS

Display total fuel in LBS (X-Plane Version)




Displays current available fuel in LBS

Display fill level for tank (FSX/P3D Version)

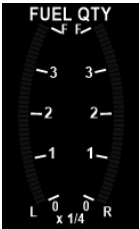

Displays current tank level in 1/4 for left and right tank

 Display fill level for left & right tank (X-Plane Version)

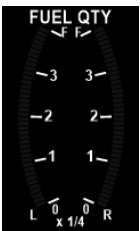

Displays current tank levels in 1/4

Fuel Used Display (FSX/P3D Version)



Displays fuel used

Fuel Used Display (X-Plane Version)



Displays fuel used

Generator Load in Amps



Displays the Generator Load in Amps (configurable for 1 or 2)

Generator Volts



Displays the Generator Volts (configurable for 1 or 2)

Inter Turbine Temperature

 


Displays the combustion gas temperature between the first and second stages of the turbine section




NG Percent RPM

Displays the speed of the low pressure compressor/turbine and fan

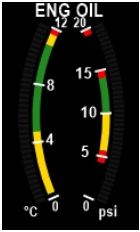

Oil Pressure and Temperature

 Displays the oil pressure in psi and oil temperature in Deg C

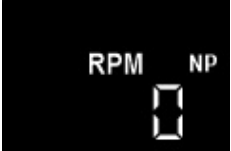


RPM of Propeller

Displays the RPM of the propeller



Torque of Engine

 Displays the torque of Engine in PSI

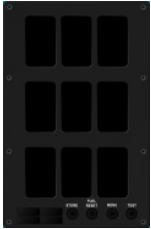

Frame for Engine Instrument Display

Displays a frame to place Engine components on



Horizontal Situation Indicator

Combines a NAV1/2 & ADF Display and a Heading Indicator into one Instrument



Radio Magnetic Indicator

Displays the direction to a NDB and VOR and magnetic heading (slaved to Gyro)



Airspeed Indicator

Displays airspeed in knots



 
Altimeter with Barometric Pressure adjustment

Displays altitude in feet



Artificial Horizon

Displays attitude of aircraft

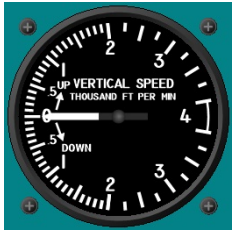

Vertical Speed Indicator

Displays the rate at which the airplane climbs or descends in feet/minute